


0.5mm pitch, 2.5mm above the board, high speed transmission connector for shielded FFC

FH41 Series

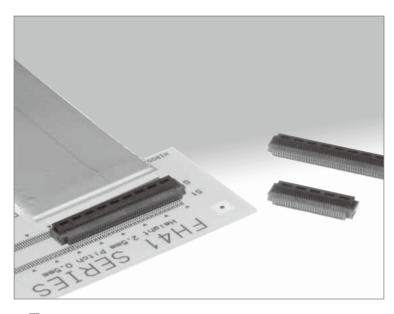

■Features

1.Compatibility with impedance control, shield FFC

The FH41 series is equipped with a GND exclusive terminal and available for connection with impedance control, shield FFC.

2.Differential impedance $100\Omega \pm 10\%$

The FH41 series features a terminal design considering impedance control, and making high speed transmission possible.

3. Highly reliable connection, tough structure

The FH41 series follows the structure of the proven FH28 series, and achieves:

- High reliability thanks to the FFC positioning mechanism
- Reliable connection operation and no unlocking thanks to the durable structure.

4. One-finger operation of the actuator


Proven (in several other Hirose's connectors!) Flip-Lock rotating actuator assures reliable mechanical and electrical connection with FPC, confirming it with a definite tactile feel.


5.Board placement with automatic equipment


Flat upper surface and tape and reel packaging facilitate vacuum pick-up and placement.
Standard reel packaging contains 2,500 connectors.


6.Halogen-free *

*As defined by IEC61249-2-21 Br-900ppm maximum, Cl-900ppm maximum, Cl + Br combined-1,500ppm maximum

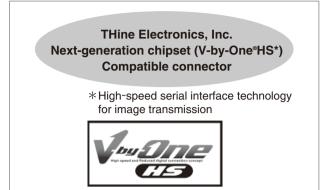

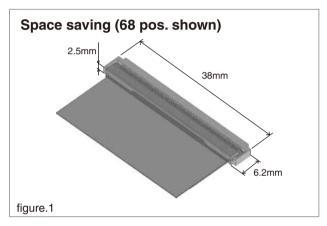

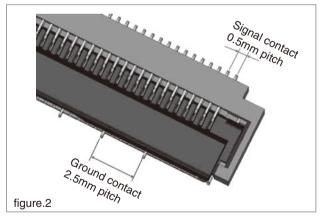

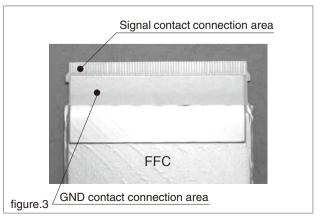

■Specifications

Ratings	Current rating 0.5 A(Note1) Voltage rating 50 Vrms AC	Operating temperature range: -40 to +85°C (Note 2) Operating humidity range: Relative humidity 90% max. (No condensation)	Storage temperature range: -10 to +50°C (Note 3) Storage humidity range: Relative humidity 90% max. (No condensation)
---------	--	---	---

Recommended FPC Thickness 0.3 ±0.05 mm, Gold plated contact pads (GND plate:t=0.5±0.05mm,tinĐplateing)

Item	Specification	Conditions
1.Insulation resistance	500 MΩ min.	100 V DC
2.Withstanding voltage	No flashover or insulation breakdown	150 Vrms AC / one minute
3.Contact resistance	100 mΩ max. ⊁ Including FFC conductor resistance	1 mA, AC max (AC: 1kHz)
4.Durability	Contact resistance: $100 \text{ m}\Omega$ max. No damage, cracks, or parts dislocation	20 cycles
5.Vibration	No electrical discontinuity of $1\mu s$ or longer Contact resistance: $100~m\Omega$ max. No damage, cracks, or parts dislocation	Frequency: 10 to 55 Hz, single amplitude of 0.75mm, 10 cycles in each of the 3 directions
6.Shock	No electrical discontinuity of $1\mu s$ or longer Contact resistance: $100~m\Omega$ max. No damage, cracks, or parts dislocation	Acceleration of 981m/s ² 6 ms duration, sine halfwave, 3 cycles in each of the 3 axis
7.Humidity (Steady state)	Contact resistance: $100~\text{m}\Omega$ max. Insulation resistance: $50~\text{M}\Omega$ min. No damage, cracks, or parts dislocation	96 hours at 40°C and humidity of 90 to 95%
8.Temperature cycle	Contact resistance: $100~\text{m}\Omega$ max. Insulation resistance: $50~\text{M}\Omega$ min. No damage, cracks, or parts dislocation	Temperature : -40°C → +15°C to +35°C → +85°C → +15°C to +35°C Time: 30 → 2 to 3 → 30 → 2 to 3 minutes 5 cycles
9.Resistance to soldering heat	No deformation of components affecting performance	Reflow: At the recommended temperature profile Manual soldering: 350°C ±5°C for 5 seconds

- Note 1. When passing the current through all of the contacts, use 70% of the rated current.
- Note 2. Includes temperature rise caused by current flow.
- Note 3. The term "storage" refers to products stored for a long period prior to mounting and use.

 The operating temperature and humidity range covers the non-conducting condition of installed connectors in storage, shipment or during transportation after board mounting.
- Note 4. Information contained in this catalog represents general requirements for this Series. Contact us for the drawings and specifications for a specific part number shown.


■Materials

Part	Material	Finish	Remarks			
Insulator	LCP	Color:Gray	UL94V-0			
Ilisulator	LOP	Color:Black	01940-0			
Contacto	Dhaanhar branza	Gold plated				
Contacts	Phosphor bronze	Dura tip reflect plated				
Metal fittings	Brass	Pure tin reflow plated				

■Ordering information

Series name : FH	5 SH : SMT horizontal mounting type				
2 Series No.: 41	6 Plating specifications :(05)Gold plated				
3 Number of positions : 28 to 68	rialing specifications (05)Gold plated				
4 Contact pitch : 0.5mm					

■Connector Dimensions

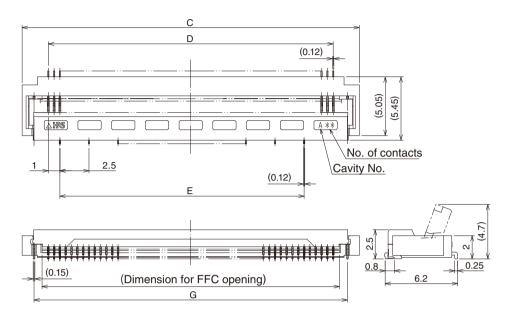

Note 1. The coplanarity of each terminal lead within specified dimension is 0.1 mm Max.


- 2. Packaged on tape and reel only. Check packaging specification.
- 3. Slight variations in color of the plastic compounds do not affect form, fit or function of the connector.
- 4. After reflow, the terminal plating may change color, however this does not represent a quality issue.

Unit: mm

Part Number	CL No.	Number of contacts	No. of Contacts(GND contacts)	С	D	Е	F	G
FH41-28S-0.5SH(05)	580-2208-1-05	28	5	18	13.5	10	14.57	15.95
FH41-40S-0.5SH(05)	580-2205-3-05	40	8	24	19.5	17.5	20.57	21.95
FH41-50S-0.5SH(05)	580-2204-0-05	50	10	29	24.5	22.5	25.57	26.95
FH41-68S-0.5SH(05)	580-2202-5-05	68	13	38	33.5	30	34.57	35.95


Note1. Tape and reel packaging (2,500 pieces/reel). Order by number of reels.

■Recommended PCB mounting pattern and metal mask dimensions

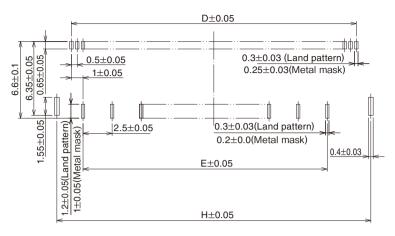

Recommended metal mask thickness t=0.1

■Recommended FFC Dimensions

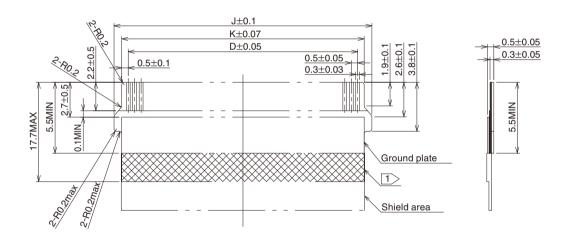

Note 1 Please overlap shield plate on ground plate.


Unit: mm

Part Number	CL No.	Number of contacts	No. of Contacts(GND contacts)	Н	J	K
FH41-28S-0.5SH(05)	580-2208-1-05	28	5	16	15.7	14.5
FH41-40S-0.5SH(05)	580-2205-3-05	40	8	22	21.7	20.5
FH41-50S-0.5SH(05)	580-2204-0-05	50	10	27	26.7	25.5
FH41-68S-0.5SH(05)	580-2202-5-05	68	13	36	35.7	34.5

Note1. Tape and reel packaging (2,500 pieces/reel).

Order by number of reels.

■Recommended FFC construction

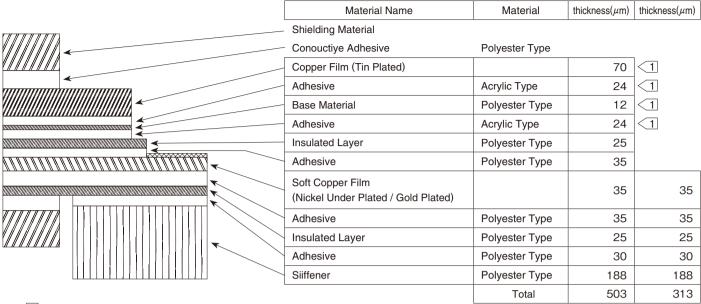


Note Please overlap shield plate on ground plate.


■Packaging Specification

Embossed Carrier Tape Dimensions


(Tape width of 24mm max.)

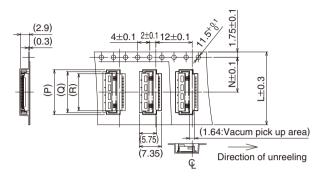

(Tape width of 32mm min.)

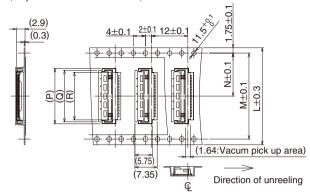


Reel Dimensions

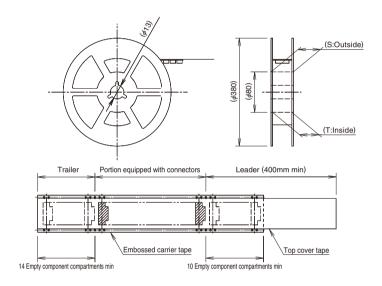

Unit: mm

Part Number	CL No.	Number of contacts	No. of Contacts(GND contacts)	L	М	N	Р	Q	R	S	Т
FH41-28S-0.5SH(05)	580-2208-1-05	28	5	32	28.4	14.2	18.3	17	15.7	37.4	33.4
FH41-40S-0.5SH(05)	580-2205-3-05	40	8	44	40.4	20.2	24.3	23	21.7	49.4	45.4
FH41-50S-0.5SH(05)	580-2204-0-05	50	10	44	40.4	20.2	29.3	28	26.7	49.4	45.4
FH41-68S-0.5SH(05)	580-2202-5-05	68	13	56	52.4	26.2	38.3	37	35.7	61.4	57.4

■Temperature Profile

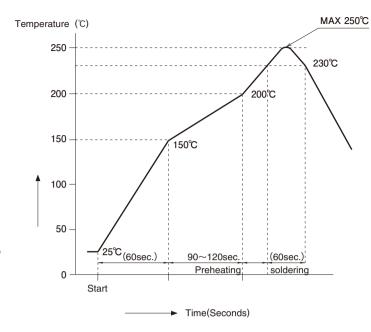

HRS test condition

Solder method :Reflow, IR/hot air

Environment :Room air

Solder composition :Paste, 96.5%Sn/3.0%Ag/0.5%Cu

(Senju Metal Industry, Co., Ltd.'s Part Number:M705-221CM5-32-10.5)

Test board :Glass epoxy 30mm×60mm×0.8mm thick

 $\begin{array}{ll} \mbox{Land dimensions} & :0.3\mbox{mm} \times 0.65\mbox{mm}, \, 0.3\mbox{mm} \times 1.2\mbox{mm} \\ \mbox{Metal mask} & :0.25 \times 0.65, \, 0.2 \times 0.1\mbox{mm thick} \\ \end{array}$

The temperature profiles shown are based on the above conditions. In individual applications the actual temperature may vary, depending on solder paste type, volume / thickness and board size / thickness. Consult your solder paste and equipment manufacturer for specific recommendations.


■Operation and Precautions

Operation

Precautions

1.FFC insertion procedure. Connector installed on the board.


Lift up the actuator. Use thumb or index finger

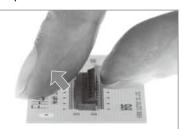

Fully insert the FFC in the connector parallel to mounting surface, with the exposed conductive traces facing down.




Rotate down the actuator until firmly closed. It is critical that the inserted FFC is not moved and remains fully inserted.

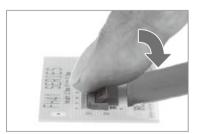

2.FFC removal


Fully open the actuator. Carefully withdraw the FFC exercising caution not to deform or damage it.

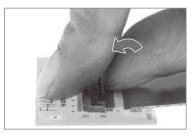


 Do not force the actuator to open beyond its fully open position. Do not use any type of tool to open the actuator.



2 Do not forcefully bend the FFC upward. Consult FFC manufacturer for the recommended bend radiuses.

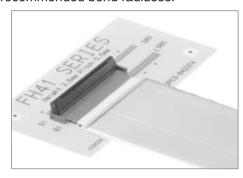

Second the second term of the rotate down the actuator pushing at both ends.

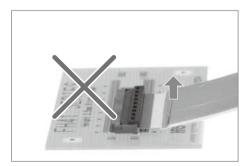

4 Load to FFC

Be very careful not to apply any force to the connector directly after inserting FFC.

Otherwise, the connector may become unlocked or the FFC may break.

In particular, design the FFC layout with care not to bend it sharply upward in a vertial direction near the insertion opening.


Fix the FFC when loads are applied to it continuously.


■Precautions (mating/un-mating FFC with the retention tabs)

Operation

1.How to insert

Insert the cable into the interspace between the mold walls (→►) at both ends of entrance where the connector is inserted and the guide walls (→⇒) at both ends of interior connector so the cable tabs are properly located.

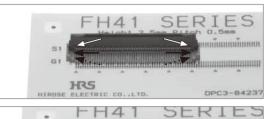

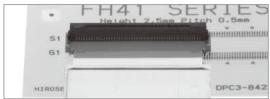

2.Precautions when mating /un-mating

Avoid insertion in diagonal direction.
 Do not insert the cable in diagonal direction.
 A part of the connector may touches the contacts resulting in deformation of the contacts.



Insert the cable straight into the connector and hook the cable tabs with the guide.

After insertion, slightly pull the cables to make sure the cable tabs are firmly secured. No removal of the cable means correct insertion.



Insert the cable straight and obliquely from above.



② Slightly pull the cable to make sure the tabs are firmly secured.



③ Close the actuator.

Precautions

Avoid "ride on" Avoid insertion so the cables ride on any guide. Be sure NOT to close the actuator as the cables ride on any guide. It may cause conduction failure.

Ride on a left guide




Ride on a right guide



Correct insertion




Do not close the actuator as the cables ride on.

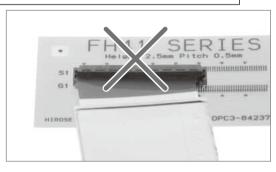

In the event it is locked as the cables ride on a guide, absolutely avoid moving the cable. In this case, open the actuator and re-insert the cable as instructed in "1.How to insert"

Do not move the cables back and forth and around as the cables ride on the guide when the actuator is closed.

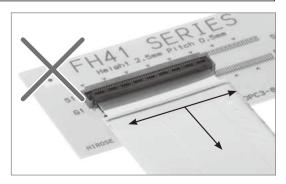

USA:

HIROSE ELECTRIC (U.S.A.), INC. Headquarters

2688 Westhills Court, Simi Valley, CA 93065-6235

Phone: 1-805-522-7958 Fax: 1-805-522-3217 http://www.hiroseusa.com

GERMANY:

HIROSE ELECTRIC EUROPE B.V. GERMAN BRANCH

Herzog-Carl-Strasse 4 D-73760 Ostfildern

(Scharnhauser Park) Phone : 49-711-4560-02-1 Fax : 49-711-4560-02-299 http://www.hirose.de

CHINA:

HIROSE ELECTRIC CO., LTD. BEIJING REPRESENTATIVE OFFICE

A1001, Ocean International Center, Building 56# East 4th Ring Middle Road, Chao Yang District, Beijing, 100025

Phone : 86-10-5165-9332 Fax : 86-10-5908-1381

http://www.hirose-china.com.cn

HONG KONG:

HIROSE ELECTRIC HONGKONG TRADING CO., LTD.

Unit 1102 A&B, Energy Plaza, 92 Granville Road,

Tsim Sha Tsui East, Kowloon Phone : 852-2803-5338 Fax : 852-2591-6560

http://www.hirose-hongkong.com.hk

KOREA:

HIROSE KOREA CO., LTD.

1261-10, Jeoungwhang-Dong, Shihung-City,

Kyunggi-Do 429-450

Phone: 82-31-496-7000,7124 Fax: 82-31-496-7100 http://www.hirose.co.kr

IISA:

HIROSE ELECTRIC (U.S.A.), INC. North California Office

20400 Stevens Creek Blvd., Ste 250, Cupertino,

CA 95014

Phone : 1-408-253-9640 Fax : 1-408-253-9641 http://www.hiroseusa.com

THE NETHERLANDS:

HIROSE ELECTRIC EUROPE B.V.

Hogehillweg #8 1101 CC Amsterdam Z-0

Phone : 31-20-6557460 Fax : 31-20-6557469 http://www.hiroseeurope.com

CHINA:

HIROSE ELECTRIC (SHANGHAI) CO., LTD.

1501-02, Cross Tower Building, 318 Fuzhou Road,

Huang Pu District, Shanghai 200001

Phone: 86-21-6391-3355 Fax: 86-21-6335-0767 http://www.hirose-china.com.cn

TAIWAN:

HIROSE ELECTRIC TAIWAN CO., LTD.

103 8F, No.87, Zhengzhou Rd., Taipei

Phone: 886-2-2555-7377 Fax: 886-2-2555-7350

http://www.hirose-taiwan.com.tw

USA

HIROSE ELECTRIC (U.S.A.), INC. Detroit Office (Automotive)

37677 Professional Center Drive, Suite #100C

Livonia, MI 48154 Phone : 1-734-542-9963 Fax : 1-734-542-9964 http://www.hiroseusa.com

UK:

HIROSE ELECTRIC EUROPE B.V. UK BRANCH

First Floor, St Andrews House, Caldecotte Lake

Business Park, Milton Keynes MK7 8LE

Phone : 44-1908-369060 Fax : 44-1908-369078 http://www.hirose.co.uk

CHINA:

HIROSE ELECTRIC CO., LTD. SHENZHEN OFFICE

Room 09-13, 19/F, Office Tower Shun Hing Square, Di Wang Commercial Centre 5002, ShenNanDong Road, ShenZhen City, Guangdong Province, 518008

Phone: 86-755-8207-0851 Fax: 86-755-8207-0873 http://www.hirose-china.com.cn

SINGAPORE:

HIROSE ELECTRIC CO., LTD.

10 Anson Road #26-16 International Plaza 079903

Phone : 65-6324-6113 Fax : 65-6324-6123

http://www.hirose-singapore.com.sg



HIROSE ELECTRIC CO.,LTD.

5-23,OSAKI 5-CHOME,SHINAGAWA-KU,TOKYO 141-8587,JAPAN PHONE: 81-3-3491-5300, FAX: 81-3-3495-5230

http://www.hirose.com

http://www.hirose-connectors.com